


POWER AND MOTION

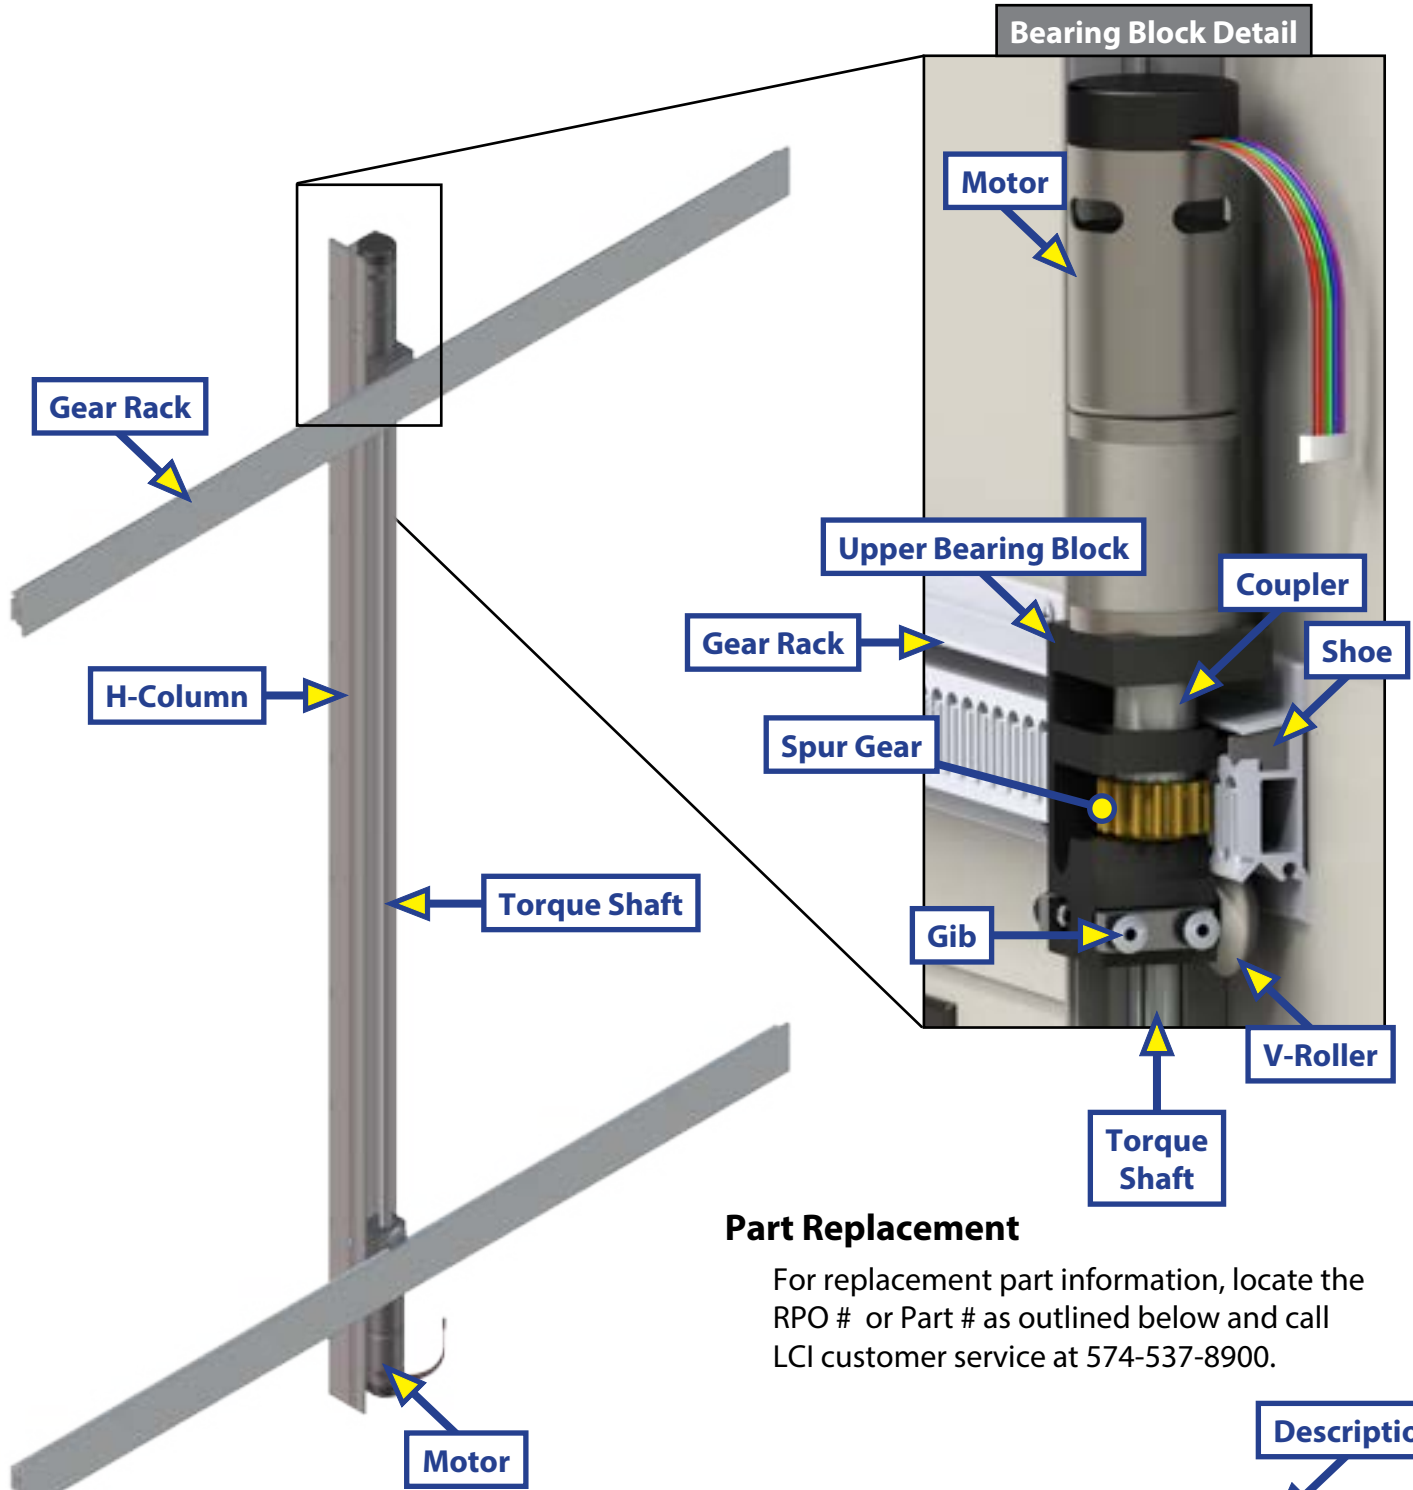

NOTE: The motor and bearing block components on the bottom of the system are identical to the top, but inverted.

Part Replacement

For replacement part information, locate the RPO # or Part # as outlined below and call LCI customer service at 574-537-8900.

