

DOORS

Keypad Programming Instructions

1. While holding the "0" button, press and release the "lock" button (Fig. 1). You will hear a long confirmation beep – entering programming mode
2. Type in the existing code, in this case, the default code, "1234", then press lock (Fig. 2)
3. Now type in your new code (up to 8 digits), press lock.
4. Again type in your new code and press "lock". (A long confirmation beep confirms and completes programming.)
 - A. The keypad comes from the factory with the default code of "1234".
 - B. Remember, we removed the "backup" reset code/button. You must have the current code to change to a new code. There is no reset button or override code.


Fig. 1



Fig. 2



Fig. 3

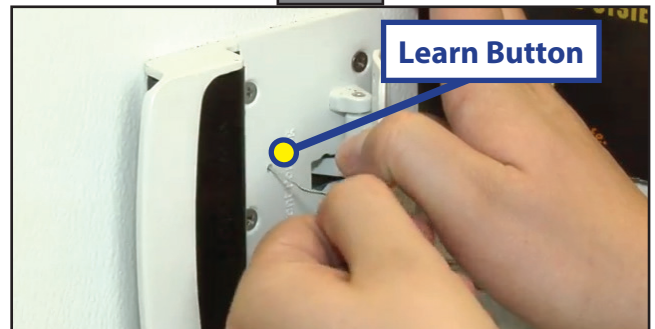

RVLock Handle Programming Instructions

1. Power up the RVLock handle.
2. Using a paperclip, lightly press the learn button located through the pin hole on the rear of the handle next to battery cover (Fig. 3). You will hear a short confirmation beep.
3. Press the lock button on the Key Fob (Fig. 4). Repeat this process until long set of beeps confirms and completes programming, usually 2 times.

Fig. 4

