



RESETTING KEYLESS ENTRY DEFAULT CODE

0228

DOORS

The Master code, eg: 123456789

Instructions:

1. Find 9-digit serial number on the front of the key pad located under the 9/0 button.
2. Contact Lippert Components: Phone: (574)537-8900; E-mail: warranty@lci1.com.
3. Provide Lippert Tech with the serial number.
4. Lippert will contact the manufacturer and request the Master Code.
5. When Lippert receives the Master Code, a tech will contact the original caller.

Follow the instructions below:

1. Press the 9-0 button for approximately 3 seconds. The keypad lights should flash twice then stay on.
2. Enter the Master Code (see example at the top of this LIP Sheet) for your specific keypad and when entering the last digit of the master code, hold the button for approximately 3 seconds. Keypad lights should turn off. The user code has been reset to "1 2 3 4".

NOTE: The default code can then be changed to a PIN following the directions found in LIP Sheet 0195.

NOTE: Be sure to save the Master Code for this particular key pad in the event it needs to reset again.