


ELECTRONICS

Fig.1

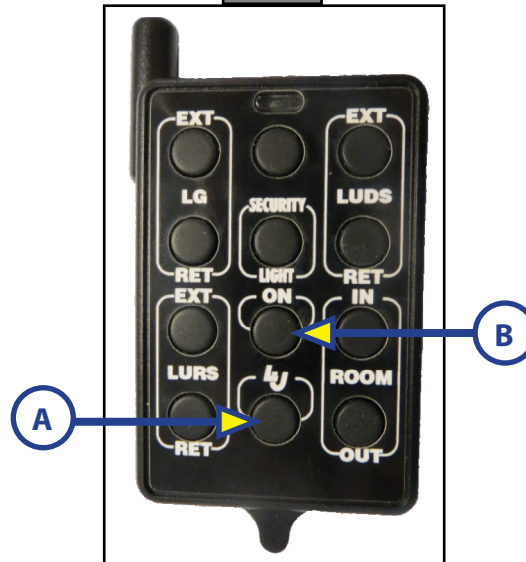

To turn wireless on/off:

1. Push and release LCI button (Fig. 1A) and then push and release Light button (Fig. 1B). System is now turned on and components can be operated with the remote.
2. Push and release LCI button and then push and release Light button:
 - A. System is now turned off with the exception of the security light.
 - B. Security light can be turned on or off at any time.
 - C. Once the security light is turned on, it will remain on until you turn it off.

CAUTION

If you do not turn the security light off it could run your battery down over time.

3. The Wireless System will automatically turn off after 150 seconds (2.5 min). The slide-out rooms and Level-Up® can still be operated with the manual switches whether the system is turned on or off.

Once system is turned on you can operate the slide-out rooms and Level-Up® from the remote:

1. Push LG (landing gear) button to extend or retract landing gear.
2. Push LUDS (level up door side) button to extend or retract level up jacks on the entry door side.
3. Push LURS (level up road side) button to extend or retract level up jacks on the road side.
4. Push the awning button to extend or retract the awning.
5. Push the room button to extend or retract the rooms. Each room is controlled by the half turn manual valves on the control panel. You can run all the rooms or just one room by turning them on or off at the control panel.

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.