


## ELECTRONICS


The blue light between the arrows should flash (Fig. 1A) when pushing the light button (Fig. 1B & 2B) and either arrow button (Fig. 1C & 2C). If the blue light does not flash (Fig. 2D) the battery may have failed. Follow instructions below to change battery.

Fig. 1 (Good Battery)

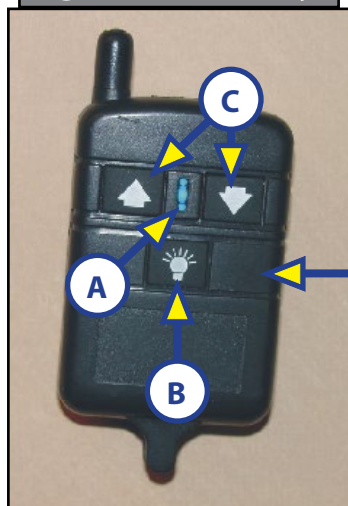

Remote Key Fob  
Part #179839

Fig. 2 (Failed Battery)

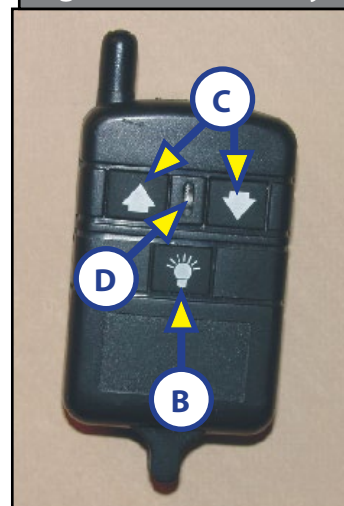

### On the back of the fob:

1. Using a Phillips Head screwdriver, remove the screw from the bottom of the fob (Fig. 3E).
2. Separate the back cover (Fig. 3F) of the fob from the fob body (Fig. 4G).
3. Remove old battery (Fig. 4H) and replace with new.
4. Replace back cover and Phillips Head screw.
5. Push arrow buttons (Fig. 1C & 2C) to test blue light.

Fig. 3


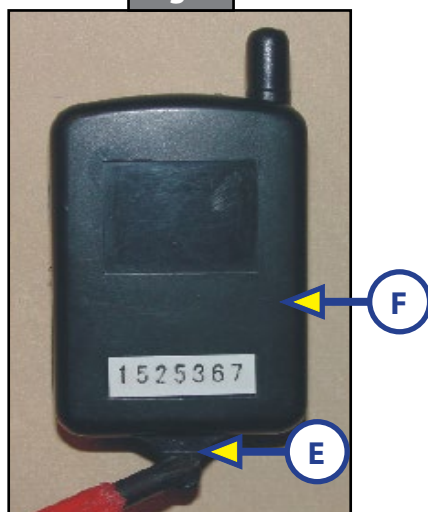


Fig. 4

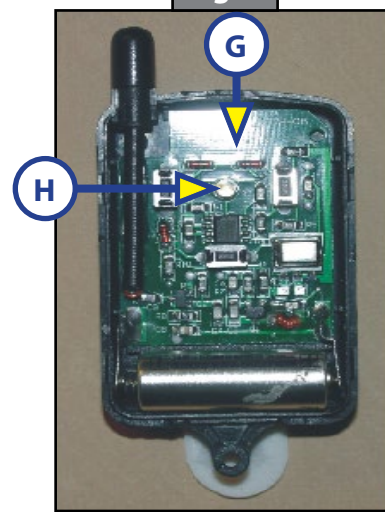

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at [customerservice@lci1.com](mailto:customerservice@lci1.com). Self-help tips, technical documents, product videos and a training class schedule are available at [www.lci1.com](http://www.lci1.com) or by downloading the MyLCI app.