


ELECTRONICS


GAMA Wireless Remotes



RF Remote Control Key
Fob - #179839 (One
23A, 12-volt battery)

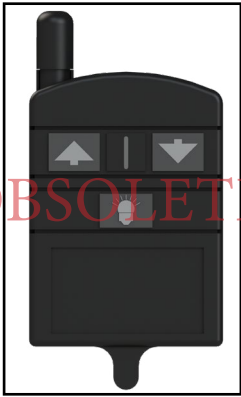

Wireless LINC
Transmitter - #179839
(Two AAA batteries)

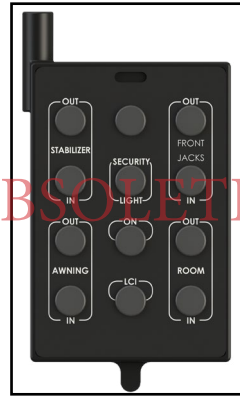


First Gen. Small
Fob - #183734 Rev. A
(One 23A, 12-volt battery)



Second Gen. Small
Fob - #183734 Rev. C
(One 23A 12-volt battery)

IDS Wireless Remotes

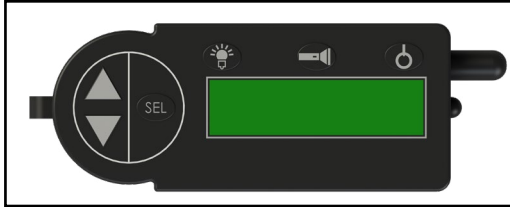


LCD Remote
Transmitter - #206436
(One - CR2 3V lithium battery)



IDS Transmitter
Version II - #292614
(Two - AAA batteries)



IDS Touch Screen Transmitters -
#260782, #300951 & #329164
(Use power cord #267401)

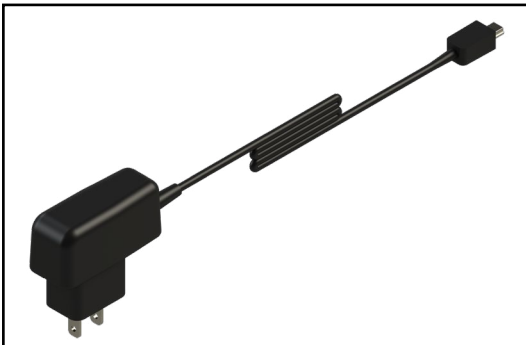

IDS Touch Screen
Power Cord - #267401
(Use to charge touch screen)




Pop Up Camper
Key Fob - #247631
(Two CR2016 3V batteries)



TV Lift Wireless
Remote (kit only) - #245701
(Two AAA batteries)

ELECTRONICS

Keyless Entry Devices
Southco Keyless Entry Components

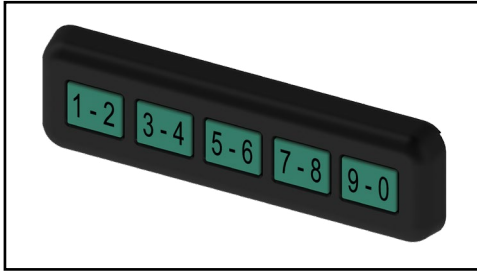

Keypad
[#239004](#)
Uses CR2032 Battery



Key Fob
[#239006](#)
Uses CR2032 Battery

RVLock Keyless Entry Components



RVLock (Black)
#252089
Uses 4 AA
alkaline batteries



RVLock (White)
#252090
Uses 4 AA
alkaline batteries



Keypad
#252093
Uses CR2032 battery



Key Fob
#252094
Uses CR2032 Battery

Bauer Keyless Entry Components



Bauer NE Lock
#307511 - NE D **#307512 - NE RV**
Uses 4 AA batteries

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.