

POWER AND MOTION

Programming the Extend and Retract Stops

1. To enter programming mode, hold the Configuration button (Fig. 1A) for five seconds.

NOTE: The green LED will flash, and the red LED will light up solid.

2. Set the extend limit by holding the EXTEND button on the wall switch and stopping at the desired height.
3. Press the Configuration button (Fig. 1A) to set the extend limit.

NOTE: The red LED will flash, and the green LED will light up solid or turn off.

4. Set the retract limit by holding the RETRACT button on the wall switch and stopping when the TV is fully lowered into the cabinet.
5. Press the Configuration button (Fig. 1A) to set the retract limit.


NOTE: Both LEDs will blink for 3 seconds and then the receiver will exit programming mode. The stops are now set.

NOTE: If the LEDs continue to flash, reprogram the stops by going through steps 2-5.

Operation

1. To raise the TV, press and hold the Extend button until the TV lift is fully raised into position.
2. Press and hold the Retract button until the TV is fully lowered.

Fig. 1 - 253395

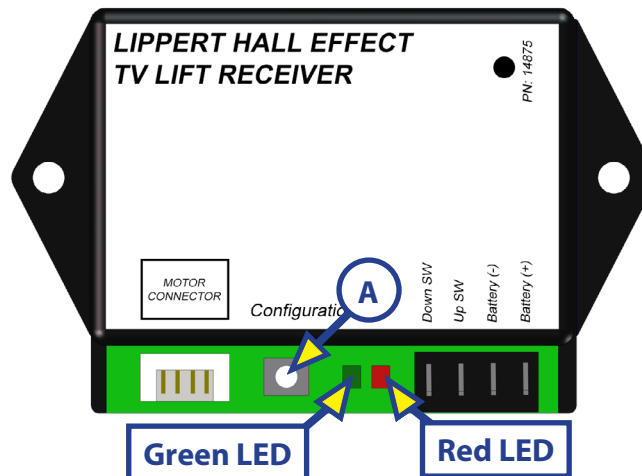

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at www.lci1.com or by downloading the MyLCI app.