



T.I.P. Troubleshooting Information on Power Gear

BATTERY CONTROL CENTER CIRCUIT BOARD REPLACEMENT

WARNING: ONLY A QUALIFIED TECHNICIAN SHOULD DO THE FOLLOWING!

To replace the Battery Control Center (BCC) printed circuit board assembly, do the following.

1. Locate the BCC box and the coach disconnect switch in the second to last storage compartment on the curb-side of the coach.
2. With the ignition in the off position and no load on the batteries, turn the coach disconnect switch to the off position.
3. Remove the two wing nut screws from the BCC box and remove the cover.
4. Locate the printed circuit board in the lower left side of BCC box.
5. Remove the 5-pin and 6-pin wire harness connectors from the circuit board.
6. Remove the 4 screws on bottom side of the BCC that hold the circuit board in place. (See picture)
7. Carefully slide the circuit board out of BCC box.
8. Remove the copper spacers and screws for use on the replacement board. (If needed)
9. Re-insert the replacement board by reversing steps 2-7.
10. Test BCC for proper operation.

