



T.I.P. Troubleshooting Information on Power Gear

REPLACEMENT INSTRUCTIONS FROM 14-1098 (OLD RELAY) TO 14-1130 (NEW RELAY).

1. Locate and disconnect the batteries and any power source to the unit.
2. Refer to original manufacturer service department for location of the slide-out relay control module.
3. Remove the 6-pin harness from the relay control by squeezing together the top of the plastic tabs on each side and pulling up from the control.
4. Remove the mounting screws and the old control. Reference the circuit breaker amperage for proper control replacement.
5. Locate and move the center wire on the slide-out switch from ground to 12V DC source through a 3 amp (preferred) fast acting standard automotive fuse. **See drawing below.**
6. Remount the replacement control and reconnect the 6-pin connector to the control module.

Note: The wire harness connector is directional and may need rotating 180° for proper mating.

7. Reconnect batteries and/or power sources then test slideout operation.

Note: For control board fuse installs or replacement, use Slo-Blo fuse only.

Call 574-537-8900 for fuse kit replacements.

NEW SLIDEOUT RELAY CONTROL (14-1130) SCHEMATIC

