




# T.I.P. Troubleshooting Information on Power Gear

## Original Manufacture Installation Instructions for the Slide-out Relay Control

- 1) The mounting location of the relay control module must be easily accessible for service (if required), protected from ANY possible water leakage, heat exposure, flammable source and /or damage.
- 2) The center post of the bezel switch requires a 12V DC fused source. (3 amp fast acting standard automotive spade fuse preferred)
- 3) For control board fuse installs or replacement, use a Slo-Blo fuse only. Call 574-537-8900 for fuse kit replacements.

### NEW SLIDEOUT RELAY CONTROL (14-1130) SCHEMATIC

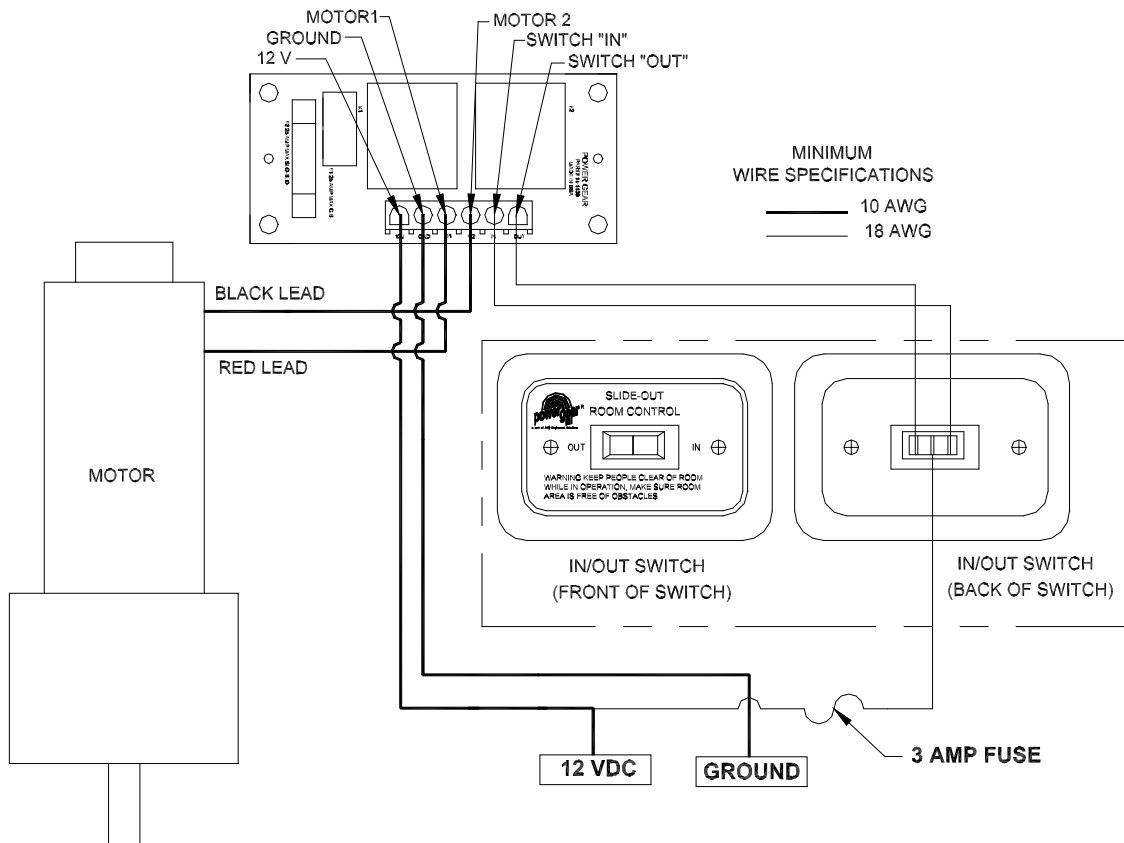

TIP Sheet #113  
82-S0259 REV. 2  
July 2003