


## HYDRAULICS

Fig. 1



1. Disconnect 12V DC lead from battery and disconnect both leads from the dual polarity solenoid.

Fig. 2

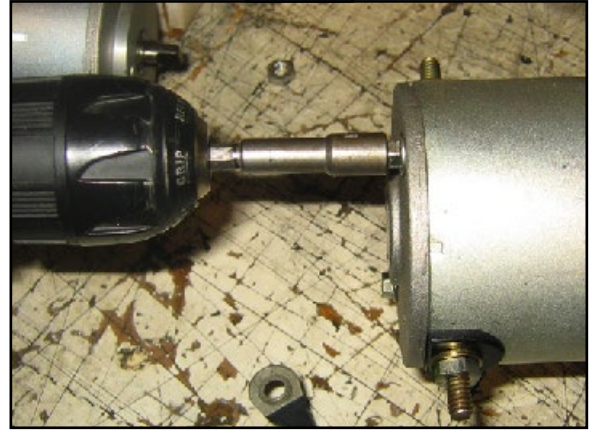

2. Remove mounting screws.

Fig. 3




3. Carefully remove entire motor. Leave the coupler inside the center section.

Fig. 4



4. Remove retaining nuts from the new motor.

Fig. 5

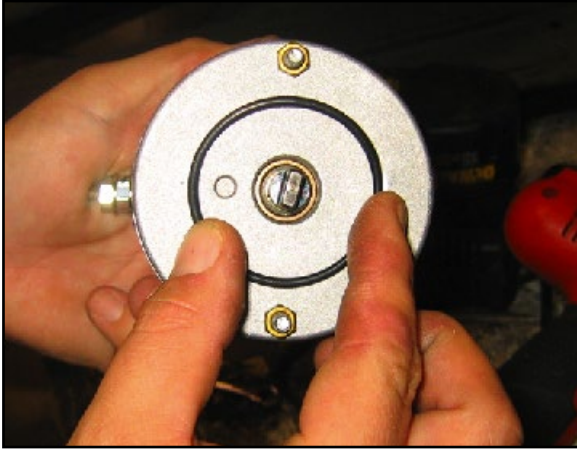

5. Apply O-Ring to new motor.

Fig. 6



6. Carefully mount new motor. Match up male motor tang to the female of the coupler in the center section and turn to align mounting screws in the 12-6 o'clock positions.

Fig. 7



7. Secure new motor to center section.

Fig. 8



8. Reconnect motor leads from the dual polarity solenoid.

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at [customerservice@lci1.com](mailto:customerservice@lci1.com). Self-help tips, technical documents, product videos and a training class schedule are available at [lci1.com](http://lci1.com) or by downloading the MyLCI app.