


HYDRAULICS

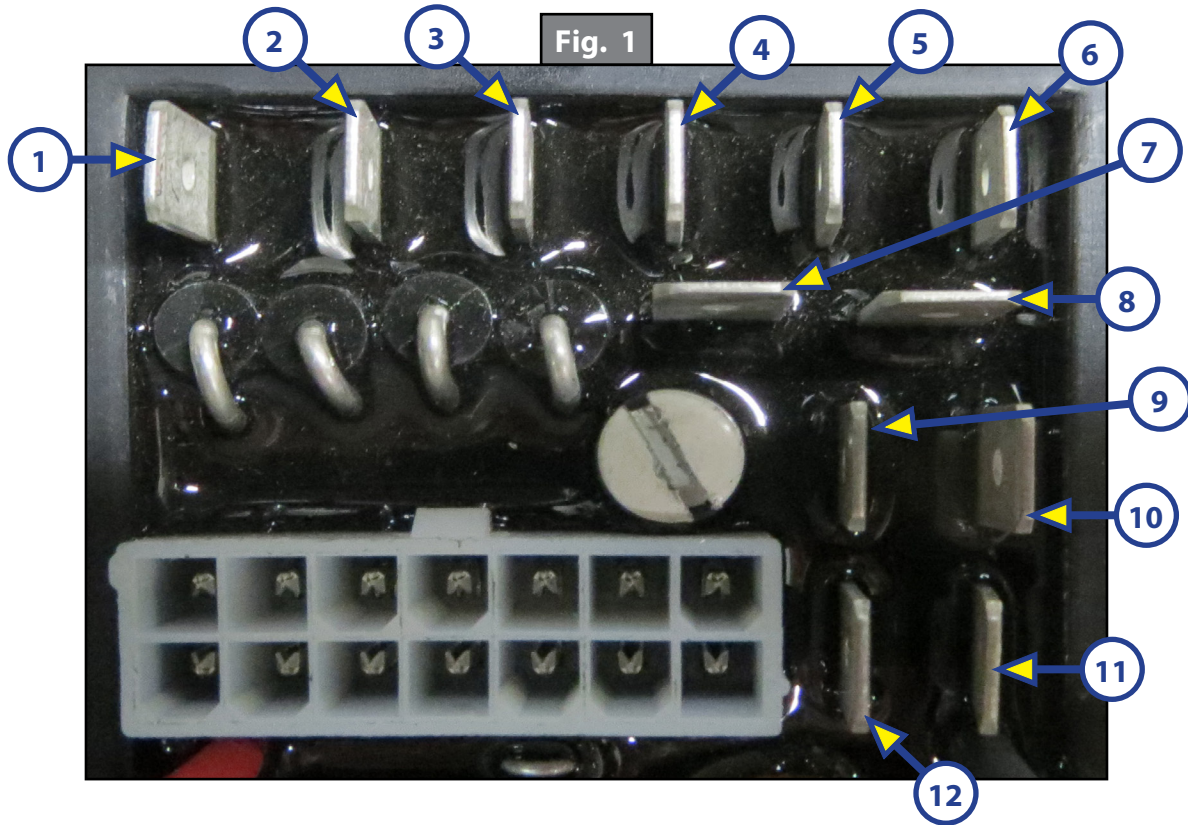

1. Right Rear Jack Valve (+)
2. Left Rear jack Valve (+)
3. Front Jack Valve(s) (+)

NOTE: Front jacks operate together. They will be linked together either through wiring or plumbing. If the valve manifold has five valves and only one slide-out room, the front jacks are linked through wiring. If there are two slide-out rooms, and the manifold has two hoses for front jack extend and two hoses for front jacket, the front jacks are linked through the plumbing.

4. PSI Switch (Green Wire from PSI) (+)
5. Pump Retract (Green Wire to Solenoid) (+)
6. Pump Extend (Yellow Wire to Solenoid) (+)
7. Valve Ground (-)
8. PSI Switch (Black Wire from PSI) (-)
9. Valve Ground (-)
10. Valve Ground (-)
11. Valve Ground (-)
12. Valve Ground (-)

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at www.lci1.com or by downloading the MyLCI app.