

## WINDOWS

### Purpose

Over time, as a vehicle travels on the road, vibrations may cause items to shift or components to come out of alignment. Periodic maintenance or adjustment may be required. Should adjustment become required, follow the instructions below.

These instructions provide the tools and steps required to perform an adjustment on an 8700 Series Window latch if necessary.

### Tools Required

- Screw gun with phillips bit
- Black silicone-based sealant (and application tool, if necessary)

### Procedure

1. Locate and open the latch (Fig. 2).
2. Open the window.
3. Locate catch (Fig. 1A) on the inner window frame and remove both installation screws (Fig. 1B).
4. Move catch so the center of the catch (Fig. 2A) lines up directly to the center of the rivet on the latch when closed (Fig. 2B).
5. Be sure the catch is flush and parallel to the back edge of the inner window frame (Fig. 3A).
6. Reinstall the screws when proper placement is made.
7. Apply sealant to the old screw holes.

**NOTE:** Allow sealant time to dry.

8. Close and lock the latch.

Fig. 1

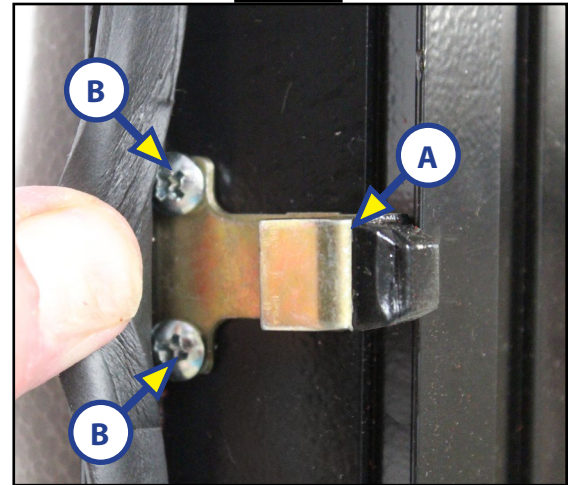


Fig. 2


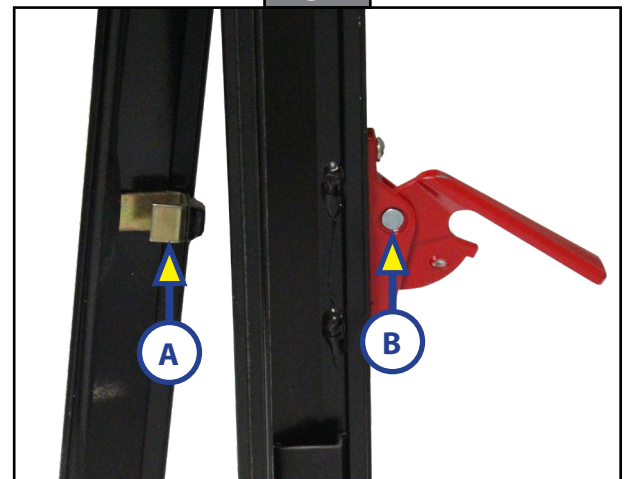


Fig. 3

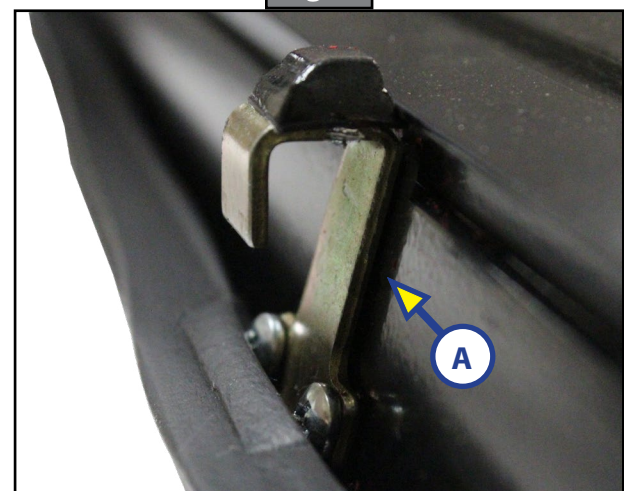

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at [customerservice@lci.com](mailto:customerservice@lci.com). Self-help tips, technical documents, product videos and a training class schedule are available at [lci.com](http://lci.com) or by downloading the MyLCI app.