T.I.P. Troubleshooting Information on Power Gear

INSTALLATION INSTRUCTIONS FOR A 521244S AND 1245S REPLACEMENT KITS

1. Locate and disconnect the batteries and any power source to the unit.
2. Refer to original manufacturer service department for location of the slide-out relay control module.
3. Remove the 6-pin harness from the relay control by squeezing together the top of the plastic tabs on each side and pulling up from the control.
4. Remove the mounting screws and the old control. Reference the circuit breaker amperage for proper control replacement.
5. Remount the replacement control and connect the 6-pin connector to the control module.

Note: The wire harness connector is directional and may need rotating 180° for proper mating.

6. Reconnect batteries and/or power sources then test slideout operation.
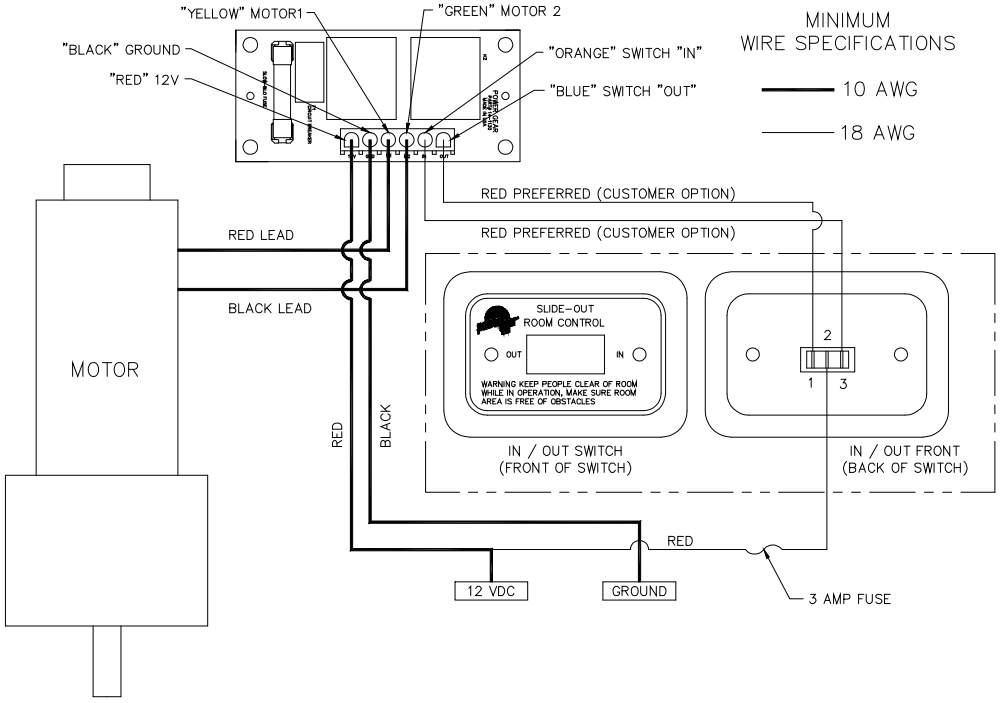
Note: For fuse installs or replacement, use Slo-Blo fuse **only** of the same amp rating as the circuit breaker. Call 574-537-8900 for fuse kit replacements.