


DOORS

NOTE: Addendum to Entry Door OEM Installation Manual.

Fig. 1

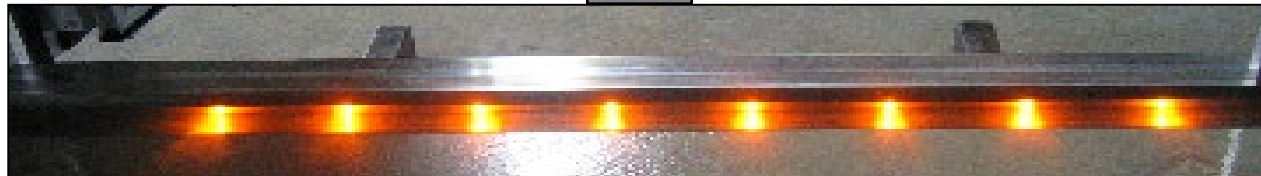

Wiring

Red to 12V DC - 16 gauge minimum
Black to ground - 16 gauge minimum (Fig. 2)

18 gauge back loop - N/A - For normal light operation loop **MUST** remain connected as delivered.

OEM to provide 10A fuse per RVIA standards.

Fig. 2


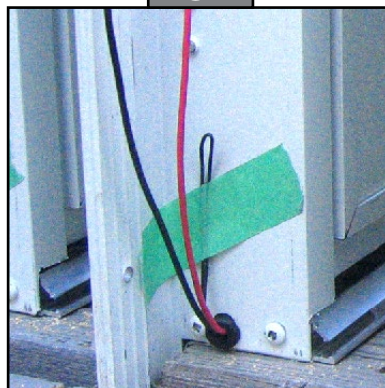


Fig. 3

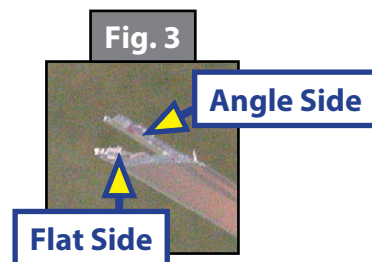

Lens Installation

Lens to be installed flat side down; angle side up.

Part Numbers	
211410	Clear Threshold (Lens)
213821	Undercover
205512	Outer Frame
216500	LED Light Strip

Fig. 4



Moving left to right, press beveled edge into threshold groove.

Fig. 5



Continue pushing top edge into groove, snapping into place.

Fig. 6



Finish by snapping edge completely to the end of threshold.

As a supplier of components to the RV industry, safety, education and customer satisfaction are our primary concerns. Should you have any questions, please do not hesitate to contact us at (574) 537-8900 or by email at customerservice@lci1.com. Self-help tips, technical documents, product videos and a training class schedule are available at lci1.com or by downloading the MyLCI app.